



# Custom Theft Proof Flush Mount Installation

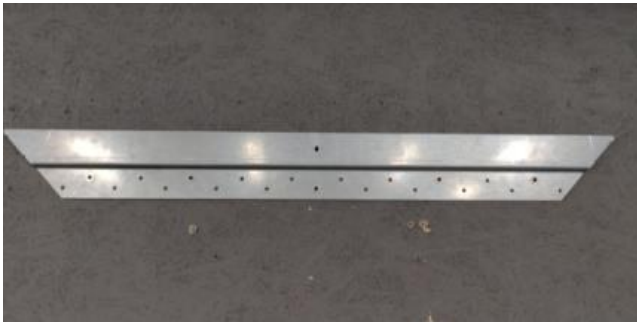

1. Install the Top and Bottom Brackets on your wall. Be sure to attach the brackets with the proper secure hardware (not included).

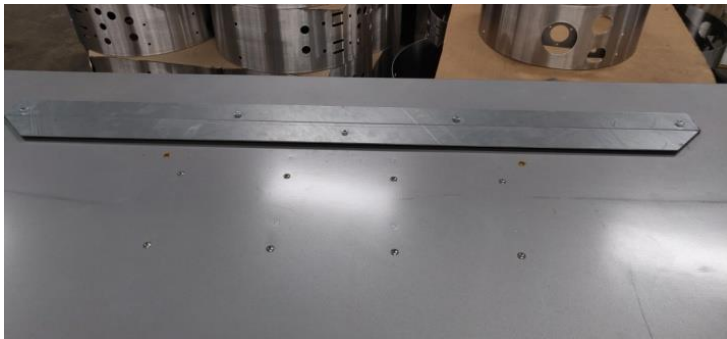

2. Attach the Top and Bottom brackets to the back of the TV Fortress (7 bolts (1/2 IN) included)




Finished Wall View



Finished Back of Fortress

3. Lift the Fortress and lower the brackets into the brackets mounted on the wall, it should self level.

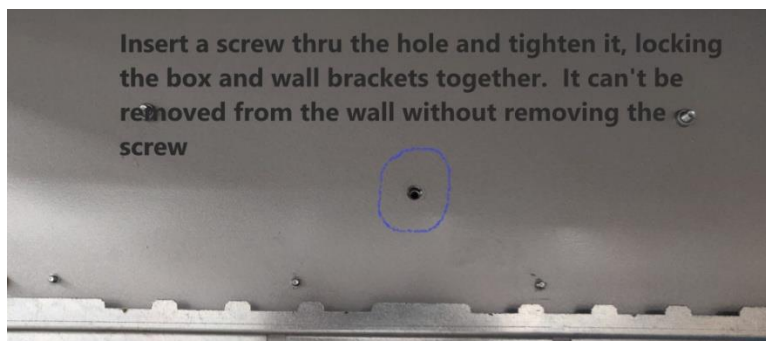

4. Looking inside the Fortress find the Locking set screw hole, and insert and tighten the set screw.